

Best Practices for Safe Crane Lifts




EXTEND ALL OUTRIGGERS, USE PROPER CRIBBING, AND ENSURE USE OF APPROPRIATE CHARTS TO HELP MAINTAIN STABILITY



ENSURE PROPER SLING ANGLES OF 45-60 DEGREES

ENSURE CRANE HAS ANTI-TWO BLOCK DEVICE TO PREVENT TWO-BLOCKING

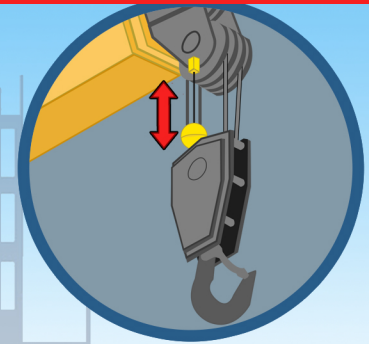

USE TAG LINES AND PUSH STICKS TO KEEP THE LOAD UNDER CONTROL

USE CLEAR SIGNALS TO COMMUNICATE WITH THE CRANE OPERATOR

NEVER STAND UNDERNEATH A SUSPENDED LOAD!

SET UP BARRICADES ALL THE WAY AROUND THE CRANE



For more information on preventing struck-by incidents, visit: www.cpwr.com/struck-by-hazards

